



SILCRUSTA MK03

Composite Microsphere

A composite material is made from two or more constituent materials with significantly different physical or chemical properties that, when combined, produce a material with characteristics different from the individual components.

Core & Shell Structure

SILCRUSTA MK03 is composed of a PMSQ core and an MMA Crosspolymer shell. It also has a textured surface. Combined, these two characteristics make them ideal choices for improved skin feel and optical blurring.

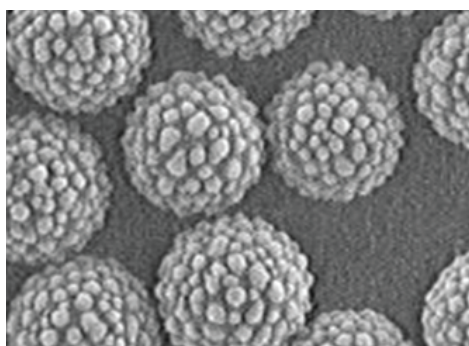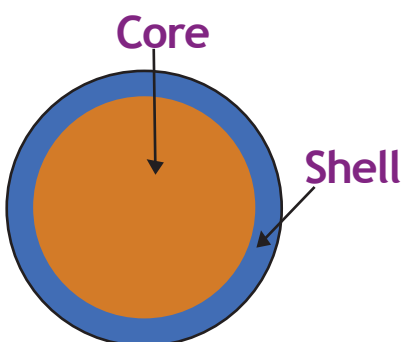

SEM picture of SILCRUSTA MK03

Product Name	INCI Name	Size
SILCRUSTA MK03	Methyl Methacrylate Crosspolymer (And) Polymethylsilsesquioxane	4 µm

Pressed Powder with SILCRUSTA MK03

KPP-069I

Part 1

• SERICITE GMS-4C - Kobo Products: Mica	70.48%
• SILCRUSTA MK03 - Nikko Rica/Kobo Products: Methyl Methacrylate Crosspolymer (And) Polymethylsilsesquioxane	10.00%
• BTD-11S2 - Kobo Products: Titanium Dioxide (And) Triethoxycaprylylsilane	7.00%
• ZINC MYRISTATE - Kobo Products: Zinc Myristate	2.00%
• BYO-11S2 - Kobo Products: Iron Oxides (CI 77492) (And) Triethoxycaprylylsilane	1.00%
• BRO-11S2 - Kobo Products: Iron Oxides (CI 77491) (And) Triethoxycaprylylsilane	0.86%
• BBO-11S2 - Kobo Products: Iron Oxides (CI 77499) (And) Triethoxycaprylylsilane	0.46%
• Methyl Paraben NF - International Sourcing: Methylparaben	0.10%
• Propyl Paraben NF - International Sourcing: Propylparaben	0.10%

Part 2

• Lexol® PG-865 - Inolex Chemical Company: Propylene Glycol Dicaprylate/Dicaprate	2.50%
• Xiameter® PMX-200 SILICONE FLUID 20CS - Dow Coming: Dimethicone	2.50%
• Xiameter® PMX-200 SILICONE FLUID 350 CS - Dow Coming: Dimethicone	2.00%
• S54267 - Momentive: Dimethicone (And) Trimethylsiloxysilicate	1.00%

Manufacturing Procedure

1. Micropulverize Part 1 until color is fully developed.
2. Add Part 2 to Part 1.
3. Blend well.
4. Press at 500 psi.

Description

Part of a formula series that shows how important Microspheres are to pressed powder formulas. Each type and size of Microsphere gives the formula a different feel. This pressed powder formula contains Kobo's SILCRUSTA MK03, Methyl Methacrylate Crosspolymer Microsphere, used for optical enhancing to accentuate the skin with a natural appearance while hiding imperfections such as fine lines and wrinkles. SERICITE GMS-4C is added to give a glide-on application. Kobo's 11S treatment helps to provide this pressed powder with adhesion to the skin and gives the formula a creamy feel. ZINC MYRISTATE also contributes to great feel and adherence on the skin.

KOBO

Kobo Products, Inc.
3474 So. Clinton Ave.
So. Plainfield, NJ 07080
USA
tel +1 (908) 757-0033
fax +1 (908) 757-0905

Kobo Products, SAS
135 Rue Buissoniere
Quartier Bouysset
31670 LABEGE
France
tel +33 (0)5-62-88-77-40
fax +33 (0)5-62-88-77-49

Kobo Brasil Ltda.
Rua Bamboré n.41
Ipiranga - São Paulo/SP
04278-060
Brasil
tel +55 (11) 5062-0634